



TWO DOOR TOP LOAD PORTABLE KENNEL Assembly Instructions

Item # 5310341




A Carrier Top (X1) **B** Carrier Base (X1)



C Bolts (X4) **D** Nuts (X4)



E Side Clips (X4)

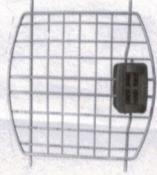

F Door (X1)


Tools Required:



Phillips head screwdriver


Step 1

Turn base (B) upside down in order to attach the side clips (E) to the side grooves. Hold the hinge (inside of the clip) to line up with the grooves on the base. On the side clips, the interior hook latches should face down (these connect to the top later).

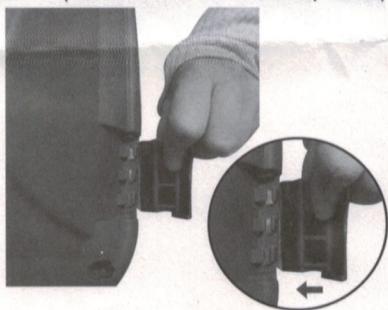

Step 2

Push the hinge bar of the side clip into the base's groove until you hear the 'click' to secure it.

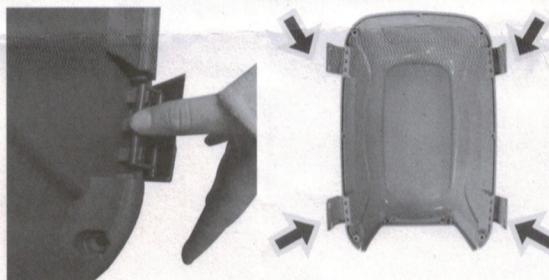

Step 3

Attach all 4 side clips (E) onto the base (B).

Step 4

Turn base over on its correct side. Put the door (F) into the base's two front holes. Lock can go on either left or right side.


Step 5

Place carrier top (A) over the door (F) fitting door's top bar ends into the carrier top's holes. Line up the top to the base (B).



Step 6

Pull clips into the latch to secure top and bottom panels.

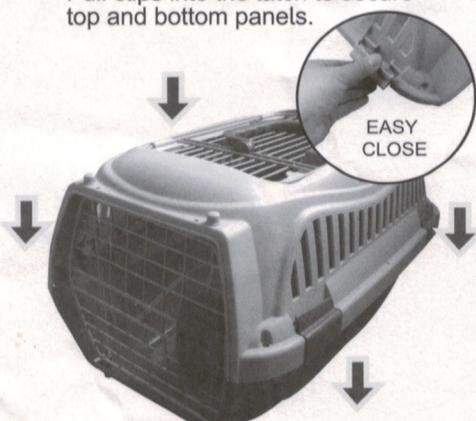

Step 7

Connect the bolts (C) and the nuts (D) in the 4 corner holes. Insert the bolts from the top of the assembly. Attach nuts from underneath. Ensure each nut is fully tightened.



If you are not satisfied with this product, return it with your valid proof of purchase for a refund. Conditions apply. See store or PetSmart.com for details.

For more information about Whisker City® products, please call 1-888-839-9638.

Dist. by/par: Pacific Coast Distributing, Inc., 19601 N. 27th Ave., Phoenix, AZ USA 85027

WC-19-500774

